
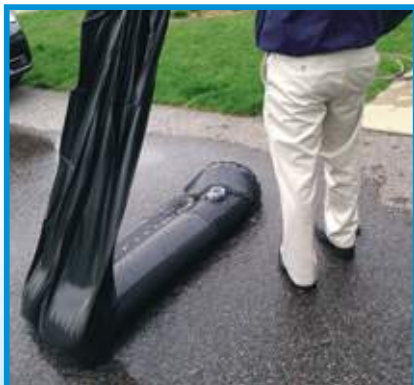


# WaterCurb™

Fill with water!

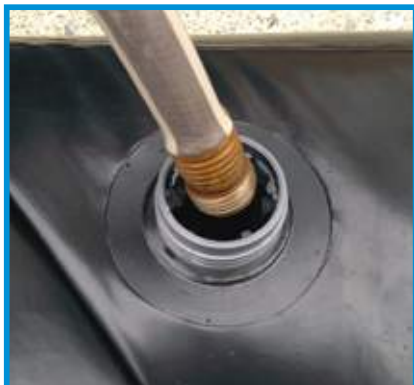

## INSTRUCTIONS:


Place it & fill it. It's really that easy!

1. Lay in desired location. Note: Once filled they can be heavy and difficult to move.
2. Remove cap, insert hose & turn on water.
3. When filled, remove hose & replace cap. Note: In freezing weather, fill 2/3 full.
4. To drain, remove cap & lift opposite end of curb to the spout.

In freezing weather, fill 2/3 full.

5. Store away for later.

\* **Note: Material is not puncture-proof. 6.5" size can be driven over, but inner excess air must be removed first & should only be filled 2/3 full. 10" size could scrape undercarriage & cause it to pop.**

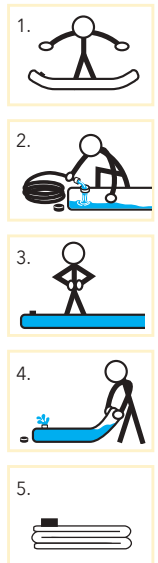

## AVAILABLE SIZES:

|                             |                          |
|-----------------------------|--------------------------|
| 6.5in x 5ft (16.5cm x 1.5m) | 10in x 5ft (25cm x 1.5m) |
| 6.5in x 10ft (16.5cm x 3m)  | 10in x 10ft (25cm x 3m)  |
| 6.5in x 20ft (16.5cm x 6m)  | 10in x 20ft (25cm x 6m)  |

**ABSORBENT**  
SPECIALTY PRODUCTS

**[QUICK DAM]**  
THE NEXT GENERATION IN FLOOD PROTECTION™

888-761-4405  
QUICKDAMS.COM